



STF-104/600 micron Poly-Knit Filter Sock


Installation Instructions

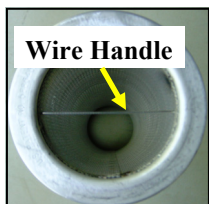

Stainless Steel Screen

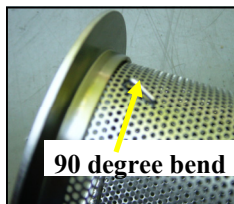

90 degree bend

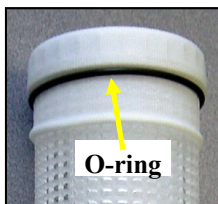


Plastic Screen

Before Sock Installation:

If you have a stainless steel filter screen with a wire handle installed in it, straighten out the 90 degree bend in the wire on one side and pull it out from the other side. If you have a plastic filter screen remove the o-rings from each end.


Step 1 Insert sock into the filter screen so that equal lengths stick out of both ends.

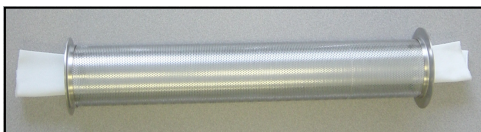

Tips:

Fold the sock in half (the long way) before inserting into the screen.


Step 2 Wrap the sock around the top and bottom of filter screen.

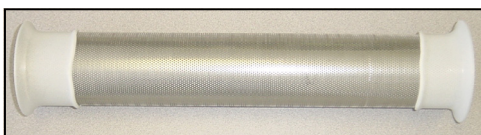

Stainless Steel Screen

Tips:

The sock material should be pulled tight, although there will still be some wrinkling even when it is tight.

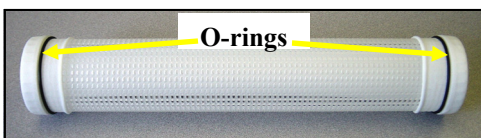

Plastic Screen with O-rings

If your pressure filter has a plastic filter screen, stretch the o-rings over the sock and screen.

Step 4 Look through end of filter screen and confirm that sock is not twisted.



Twisted Sock



Corrected Sock

Tips:

If the sock is twisted, grab the sock over one of the ends of the screen and twist until the sock is straight.

Step 5 Dispose of the old filter sock in accordance with state and local regulations.

Important Notes:

- Socks filter out much finer solids than the filter screen and will most likely require more frequent service depending upon the application.
- If choosing to reuse the sock, make sure that there is no visible damage to the sock.